

KORG MONO/POLY WITH TUBBUTEC MODYPOLY UPGRADE CHEAT CARD

PLAY MODES

CHORD MEMORY

UNISON

UNISON/SHARE

POLY

2 VOICE

3 VOICE

RANDOM

RANDOM 2

POLYCHORD

POWER ARP

EXTENDED UNISON

SELECT UNISON MODES FOR KEY PRIORITY

UP DOWN UP/DOWN

POLYCHORD

ASSIGN A CHORD TO EACH KEY RECORD:

1. PLAY CHORD
2. PRESS POLY + CHORD LED BLINKS
3. SELECT KEY FOR PLACEMENT
4. EXIT TO PLAY MODE

POWER ARP

LOAD SEQUENCE:
PRESS UNI/SH + SELECT ARP ON

ENTER NOTES
NOTES + HOLD = TIE
HOLD = REST

PRESS UNI/SH WHEN COMPLETE

PLAYBACK - TRANPOSE

PLAYBACK FROM F3
TRANPOSE BY SELECTING ANY OTHER KEY ABOVE OR BELOW

MODE - UP, DOWN, UP/DOWN

SELECT PLAYBACK DIRECTION

RANGE - 1 OCT, 2 OCT, FULL

SELECT SEQUENCE RANGE AND RANDOM MODE

FULL + 1 OCT - RANDOM MODE
FULL + 2 OCT - NON REPEATING RANDOM
FULL + UP/DOWN - PING PONG RANDOM

CONFIGURATION MENU

ACCESS THE CONFIGURATION MENU BY LONG PRESSING THE HOLD BUTTON
HOLD BUTTON WILL BLINK TO CONFIRM YOU ARE IN CONFIGURATION MODE
EXIT CONFIGURATION MENU BY AGAIN PRESSING HOLD



MIDI

SET THE MIDI CHANNEL

1. PRESS/SELECT MODE: MIDI IN/MIDI OUT AS SOUND, MIDI OUT AS PLAYED
2. SELECT CHANNEL - 0 OFF/OMNI - 1-16

DEFINITION

- IN** SET THE MIDI INPUT CHANNEL 0, 1-16
- AS PLAYED** SET THE MIDI OUTPUT MODE/CHANNEL - NOTE DATA ONLY
- AS SOUNDS** SET THE MIDI OUTPUT MODE/CHANNEL - NOTES, ARP, CHORDS ARE SENT AS DATA

NOTE: INPUT AND OUTPUT MAY BE SET TO DIFFERENT CHANNELS TO AVOID MIDI LOOPS

CLOCK

SET THE ARPEGGIATOR AND S/H CLOCK AND THEIR DIVISIONS

VIA MIDI CC

0-7	8-15	16-23	24-31	32-39	40-47	48-55	56-63	64-71	72-79	80-87	88-95	96-103	104-111	112-119	120-127
2.5	2	1.5	1	3/4	1T	1/2	3/8	1/2T	1/4	3/16	1/4T	1/8	1/8T	1/16	1/32

VIA THE PANEL

SELECT TRIGGER MODE: INTERNAL, MIDI NOTE, MIDI CLOCK
THEN SELECT DIVISION
SET DIVISION WITH THE KEYBOARD KEYS 1-17

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
2.5	2	1.5	1	3/4	1T	1/2	3/8	1/2T	1/4	3/16	1/4T	1/8	1/8T	1/16	1/32

FOR SAMPLE/HOLD THERE IS ALSO THE AMOUNT SETTING
SELECT AMOUNT KEY, CHOOSE AMOUNT (0-16)
OR VIA MIDI WITH CC 12

TRIANGLE FILTER LFO

THIS SPECIAL FILTER LFO CAN ONLY BE CONTROLLED VIA MIDI
CC 23 TRIANGLE LFO COARSE FREQUENCY 0-127
CC 24 TRIANGLE LFO FINE FREQUENCY 0-127
CC 25 TRIANGLE LFO AMOUNT 0-127

PITCHBEND

IF IT'S INSTALLED, PITCH BEND DATA IS SENT AND RECEIVED AS PB MIDI CC INFORMATION

FILTER FREQUENCY VIA MIDI

IF IT IS INSTALLED, FILTER FREQUENCY MAY BE SET AND ADJUSTED VIA MIDI CC 17

PROGRAM CHANGE

- | | |
|---|---------------------|
| 0 | 6 VOICE POLY |
| 1 | UNISON |
| 2 | 2 VOICE POLY |
| 3 | 3 VOICE POLY |
| 4 | CHORD MEMORY |
| 5 | POLYCHORD |
| 6 | UNISON/SHARE |
| 7 | 4 VOICE POLY |
| 8 | 3 VOICE POLY |
| 9 | RANDOM 4 VOICE POLY |

MIDI

- OFF/OMNI
- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16
- In
- As-Played
- As-Sounds

ARP

- internal
- midi note
- m. clock
- Divider

SH - LFO

- internal
- midi note
- m. clock
- Divider
- amount
- pitch bend cal
- factory reset